

APPAREO



Maintenance Manual

Appareo Systems Stratus ES/ESG System

SERIAL NUMBER: _____

REGISTRATION NUMBER: _____

| | | | | |
|--|--|----------------------------------|------------|------------------|
| This document and the information contained herein are the property of Appareo Systems, LLC and are confidential. They may not be disseminated or redistributed without the written permission of Appareo Systems, LLC | APPAREO SYSTEMS, LLC FARGO, NORTH DAKOTA 58102 | | | |
| | Stratus ES/ESG Maintenance Manual | | | |
| DOCUMENT NUMBER 600845-000024 | Document Type Certification | Last Revised 20 February 2018 | REV 2.2 | Sheet 1 of 28 |

Record of Revision

| Revision Number | Change Description | Effective Date | Inserted By |
|-----------------|--|----------------|---------------|
| 1.0 | Initial Release | 5/29/2015 | Angela Lorenz |
| 1.1 | CM 10304 | 1/05/2016 | Angela Lorenz |
| 1.2 | CM 10612 | 2/15/2016 | Angela Lorenz |
| 1.3 | CM 11328 | 5/11/2016 | Angela Lorenz |
| 1.4 | CM 11509 | 6/08/2016 | Angela Lorenz |
| 2.0 | CM 13666 | 4/18/2017 | Angela Lorenz |
| 2.1 | CM 13666 | 6/29/2017 | Angela Lorenz |
| 2.2 | Updated SW and CEH revision levels in Table 4, added alternate COTS number for screw, Table 6, added Transmitter Failure Display in Section 10.1.2 | 2/20/2018 | Angela Lorenz |

Related Documentation

| Document Number | Title |
|-----------------|--|
| 600840-000031 | Stratus ES/ESG Installation Instructions |
| 600890-000049 | Stratus ES/ESG Pilot's Guide |
| 601837-000024 | Stratus ES/ESG Installation Drawings and Wiring Diagrams |

Warranty

To view the Stratus ES/ESG warranty, log into the Appareo Dealer Portal or visit www.appareo.com/resources.

Table of Contents

| | |
|---|----|
| Abbreviations and Definitions..... | 6 |
| 1. INTRODUCTION..... | 7 |
| 1.1. PURPOSE..... | 7 |
| 1.2. CERTIFICATION INFORMATION | 7 |
| 1.3. SYSTEM DESCRIPTION | 9 |
| 1.4. TOOLS..... | 10 |
| 1.5. WEIGHT AND BALANCE INFORMATION | 10 |
| 1.6. EQUIPMENT DIMENSIONS..... | 11 |
| 1.7. ELECTRICAL SPECIFICATIONS..... | 11 |
| 1.8. POWER REQUIREMENTS | 11 |
| 2. AIRWORTHINESS LIMITATIONS | 12 |
| 3. INSPECTION REQUIREMENTS AND OVERHAUL (ATA CHAPTER 5) | 12 |
| 3.1. GENERAL INSPECTION INFORMATION..... | 12 |
| 4. DIMENSIONS AND ACCESS (ATA CHAPTER 6)..... | 13 |
| 4.1. COMPONENT LOCATIONS..... | 13 |
| 4.2. MAINTENANCE INSTRUCTIONS..... | 13 |
| 4.3. FUNCTIONAL TESTS | 16 |
| 5. LIFTING AND SHORING (ATA CHAPTER 7)..... | 19 |
| 5.1. LIFTING INFORMATION..... | 19 |
| 5.2. SHORING INFORMATION..... | 19 |
| 6. LEVELING AND WEIGHING (ATA CHAPTER 8) | 19 |
| 6.1. LEVELING INFORMATION | 19 |
| 6.2. WEIGHING INFORMATION | 19 |
| 7. TOWING AND TAXIING (ATA CHAPTER 9)..... | 19 |
| 7.1. TOW INSTRUCTIONS | 19 |
| 7.2. TAXIING INSTRUCTIONS | 19 |
| 8. PARKING, MOORING AND STORAGE (ATA CHAPTER 10) | 20 |
| 8.1. MOORING INFORMATION | 20 |
| 8.2. PARKING INFORMATION | 20 |
| 8.3. STORAGE LIMITATIONS | 20 |
| 9. PLACARDS AND MARKINGS (ATA CHAPTER 11)..... | 20 |
| 10. SERVICING (ATA CHAPTER 12)..... | 20 |
| 10.1. SERVICING INFORMATION..... | 20 |

| | | |
|-------|--|----|
| 10.2. | LUBRICATION INFORMATION | 23 |
| 10.3. | EQUIPMENT REQUIRED FOR SERVICING | 23 |
| 10.4. | CONSUMABLE MATERIALS | 23 |
| 11. | WIRING DIAGRAMS | 24 |

List of Figures

| | |
|---|----|
| Figure 1: Stratus ES/ESG installation diagram | 13 |
| Figure 2: Locking mechanism location | 14 |
| Figure 3: Software update wiring diagram | 15 |
| Figure 4: Interface for Stratus ES/ESG functional tests | 18 |
| Figure 5: Pin-out | 24 |
| Figure 6: Stratus ES wiring diagram with parallel altitude encoder | 25 |
| Figure 7: Stratus ES wiring diagram with serial altitude encoder | 26 |
| Figure 8: Stratus ESG wiring diagram with parallel altitude encoder | 27 |
| Figure 9: Stratus ESG wiring diagram with serial altitude encoder | 28 |

List of Tables

| | |
|--|----|
| Table 1: TSO compliance..... | 7 |
| Table 2: TSO deviations..... | 8 |
| Table 3: Criticality level | 8 |
| Table 4: Embedded hardware and software | 9 |
| Table 5: Required hardware (LRUs)..... | 9 |
| Table 6: Required hardware (COTS components) | 10 |
| Table 7: Required tools | 10 |
| Table 8: Stratus ES/ESG weight | 11 |
| Table 9: Equipment dimensions | 11 |
| Table 10: Electrical specifications | 11 |
| Table 11: Power requirements | 11 |
| Table 12: Scheduled maintenance | 12 |
| Table 13: Troubleshooting guide..... | 23 |

Abbreviations and Definitions

| Abbreviation | Term | Definition |
|--------------|---------------------------------|--|
| CFR | Code of Federal Regulations | Codification of the general and permanent rules and regulations published in the Federal Register by the executive departments and agencies of the United States Federal government. |
| ES | Extended Squitter | A periodic message that provides position, velocity, and time. Part of the marketing name for Stratus ES. |
| ESG | Extended Squitter and GPS | Part of the marketing name for Stratus ESG. |
| FAA | Federal Aviation Administration | Agency of the United States Department of Transportation with authority to regulate and oversee all aspects of civil aviation in the United States. |
| Gb | Gigabit | Unit of information or computer storage equal to 1,000,000,000 bits (equal to 125 megabytes). |
| GPS | Global Positioning System | A system used to identify the longitude, latitude and in some instances the altitude of a given object. |
| Hz | Hertz | Unit of frequency based upon cycles per second. |
| TSO | Technical Standard Order | Minimum performance standard for specified materials, parts, and appliances used on civil aircraft (FAA definition). |
| WAAS | Wide Area Augmentation System | System of ground-based antennas whose precisely known locations are used to correct satellite signals and provide greater positional and integrity of service to aircraft in flight. |

1. INTRODUCTION

1.1. PURPOSE

This Maintenance Manual describes the recommended and required maintenance practices to maintain the Appareo Systems Stratus ES and Stratus ESG systems.

Electronic media or hard copy revisions/updates to this document will be made available to all owners if contact information is provided to the manufacturer. Aircraft owners are encouraged to provide up-to-date information to ensure timely access to new information. You can contact the manufacturer at:

Appareo Systems, LLC
1830 NDSU Research Circle North
Fargo, ND 58102

To view the most current version of this document, go to appareo.com/dealer-portal or www.appareo.com/resources.

All structural and general maintenance must be performed in accordance with the aircraft's Standard Practices Manual and FAA AC 43.13-1B.

1.2. CERTIFICATION INFORMATION

1.2.1. TSO and FCC compliance

TSO

Stratus ES/ESG is compliant with the following Technical Standard Orders:

| Reference/Issue | Title |
|-------------------------------------|---|
| FAA TSO-C112e | Technical Standard Order: Air Traffic Control Radar Beacon System/Mode Select (ATCRBS / Mode S) Airborne Equipment |
| FAA TSO-C145d (Stratus ESG only) | Technical Standard Order: Airborne Navigation Sensors Using The Global Positioning System |
| FAA TSO-C166b | Technical Standard Order: Extended Squitter Automatic Dependent Surveillance – Broadcast (ADS-B) and Traffic Information Service – Broadcast (TIS-B) Equipment Operating on the Radio Frequency of 1090 Megahertz (MHz) |

Table 1: TSO compliance

FCC

Stratus ES/ESG has an FCC ID of 2AETC-1505005.

1.2.2. TSO deviations

| TSO | Section | Deviation |
|---------------------------------|----------------------|--|
| TSO-C145d (Stratus ESG only) | Section 3, Subpart D | Environmental qualification testing was performed to DO-160G, not DO-160E. |

Table 2: TSO deviations

1.2.3. Non-TSO functions

Below are Stratus ES/ESG's non-TSO functions:

- VFR key (and configuration).

This non-TSO function does not interfere with Stratus ES/ESG's compliance with the requirements of the TSOs listed in Section 1.2.1.

1.2.4. Environmental qualifications

Stratus ES/ESG is tested to DO-160G. The Stratus ES/ESG Environmental Qualification form is found in Appendix A of the Stratus ES/ESG Installation Instructions (600840-000031).

1.2.5. Criticality level

Software level determination is based on the Functional Hazard Assessment (FHA) and Preliminary System Safety Assessment (PSSA). These assessments determined that the most severe failure conditions (see Table 1) are classified as Major. As such, the Software Assurance Level has been determined to be Major.

Major failure conditions would reduce the capability of the aircraft or the ability of the crew to cope with adverse operating conditions to the extent that it would be a significant reduction in safety margins or functional capabilities or a significant increase in crew workload. Software whose anomalous behavior would cause or contribute to a failure of the system function resulting in a Major failure condition for the aircraft is identified as Level C.

| Function | Description | Classification |
|--------------------------------------|---|----------------|
| ATCRBS / Mode S Transponder | Malfunction of the ATCRBS / Mode S transponder function without warning | Major |
| ADS-B Out | Broadcast of incorrect ADS-B messages without warning | Major |
| GPS/SBAS Receiver (Stratus ESG only) | Loss or malfunction of the GPS/SBAS receiver function | Major |
| Pressure Altitude Output | Failure of the pressure altitude output function | Major |
| RF Feed-Through | Malfunction of the RF feed-through function without warning | Major |

Table 3: Criticality level

1.3. SYSTEM DESCRIPTION

Stratus ES and Stratus ESG by Appareo are panel-mounted level 2els Class 1 Extended Squitter transponders. They are Class B1S transponders which are ADS-B Out compliant. Stratus ES and Stratus ESG respond to legacy Mode A/C interrogations and Mode S interrogations from both ground radar and airborne collision avoidance systems. To support the ADS-B Out function, Stratus ESG also contains a Class Beta 1 GPS/WAAS receiver. Stratus ES receives GPS information from approved GPS position sources.

1.3.1. Operation of Stratus ES/ESG

See the Stratus ES/ESG Pilot's Guide (600890-000049) for a full description of Stratus ES/ESG's function.

1.3.2. Embedded Hardware and Software

The embedded hardware and software information listed below is current as of the time of publication of this document.

| Description | Part number | Revision (or later FAA approved) |
|--------------------------|---------------|-------------------------------------|
| Embedded Hardware (FPGA) | 501010-000109 | R05 |
| Software (DSC) | 501010-000113 | R07 |

Table 4: Embedded hardware and software

Refer to Section 4.2.3 for software/embedded hardware update procedures.

1.3.3. Stratus ES/ESG parts catalog

The following parts are required for the installation of Stratus ES/ESG.

Line Replaceable Units (LRUs):

| Item | Appareo Part Number | Commercial Part Number | Quantity |
|---|--------------------------------------|------------------------|----------|
| Backplate | 153510-000015 | - | 1 |
| Stratus ES Transponder or Stratus ESG Transponder | 153510-000069 or 153510-000017 | - | 1 |
| Stratus ESG Rack | 153540-000027 | - | 1 |
| RF TNC Pass Through Adapter (Stratus ESG only) | 251015-000077 | - | 1 |
| RF BNC Pass Through Adapter | 251015-000078 | - | 1 |

Table 5: Required hardware (LRUs)

COTS components:

| Item | Appareo Part Number | Commercial Part Number | Quantity |
|---------------------------------|---------------------|--|----------|
| #6-32 x 100° Flat Head SS Screw | - | MS24693, AN507R or other approved fastener | 6 |
| Metal Hex Stop Nut * | - | MS21042-06 | 6 |
| Monadnack Clip Nut 6-32* | - | 294667 | 6 |
| Replacement pins | - | M39029/63-368 | - |
| 37 Pin DSUB Connector | 251015-000074 | M24308/2-4F | 1 |
| Screw | 356060-000007 | - (ALT: MS51957-13) | 6 |
| Strain Relief Backshell | 356070-000006 | M85049/48-1-4F | 1 |

Table 6: Required hardware (COTS components)

*These parts are identified as usable components, but are not identified as the only components that can be used. Installer must determine if the part is appropriate for specific installation or if an alternate part is required.

Stratus ES/ESG also requires input from a GPS position source (Stratus ES) or GPS antenna (Stratus ESG), transponder antenna, and altitude encoder. See Stratus ES/ESG Installation Instructions (600840-000031) for equipment requirements.

1.4. TOOLS

The following tools may be needed for maintenance of Stratus ES/ESG.

| Tool | Part Number | Used For |
|--------------------------------|--------------|---|
| 3/32" hex driver | - | Securing locking mechanism through the face plate |
| External retaining ring pliers | - | RF pass through adapter |
| Crimp tool | M22520/2-01 | DSUB pins |
| Positioner | M22520/2-08 | DSUB pins |
| Insertion/extraction tool | M81969/39-01 | DSUB pins |

Table 7: Required tools

1.5. WEIGHT AND BALANCE INFORMATION

The total weight of the Stratus ES/ESG system and related hardware is less than 4 lbs. Compute a Chart "C" in accordance with the table below, noting the proper aircraft station to obtain balance information.

| Component | Weight |
|--|-------------------|
| Stratus ES/ESG Unit Weight | 2.8 lbs. (1.3 kg) |
| Stratus ES/ESG Total Installed Weight (Transponder, rack, and connectors) | 3.3 lbs. (1.5 kg) |

Table 8: Stratus ES/ESG weight

1.6. EQUIPMENT DIMENSIONS

Dimensions for Stratus ES/ESG are outlined in the table below. All figures given are representative of maximum equipment dimensions (where applicable).

| Characteristic | Specification |
|--|------------------------|
| Bezel Width | 6.38 inches (162 mm) |
| Bezel Height | 1.69 inches (43 mm) |
| Rack Width | 6.32 inches (160.4 mm) |
| Rack Height | 1.65 inches (42 mm) |
| Depth from back of bezel to end of strain relief on rack (not compensating for wire bend radius) | 10.75 inches (273 mm) |

Table 9: Equipment dimensions

1.7. ELECTRICAL SPECIFICATIONS

| Characteristic | Specification |
|-------------------------------|---|
| Altitude | Up to 25,000 ft |
| External Suppression Input | Low ≤ 0.5 V High ≥ 5 V (suppressed) |
| Mode A Capability | 4096 Identification Codes |
| Mode C Altitude Capability | Parallel altitude encoder: up to 62,700 ft Serial altitude encoder: up to 126,700 ft |
| Mode S Capability | Parallel altitude encoder: up to 62,700 ft Serial altitude encoder: up to 126,700 ft |
| Operational Temperature Range | -20°C to +55°C |
| Receiver Frequency | 1030 MHz |
| Receiver Sensitivity | -74 dBm nominal for 90% replies |
| Transmitter Frequency | 1090 MHz \pm 1 MHz |
| Transmitter Power | 310 Watts nominal |

Table 10: Electrical specifications

1.8. POWER REQUIREMENTS

| Characteristic | Specification |
|----------------------|-------------------------------------|
| Input Voltage Range | 11 to 36 Vdc |
| Nominal Current Draw | 0.28 A at 28 Vdc 0.5 A at 14 Vdc |
| Power Input | 8 W Typical 59.5 W Max |

Table 11: Power requirements

2. AIRWORTHINESS LIMITATIONS

This Airworthiness Limitations section is FAA approved and specifies inspections and other maintenance required under §43.16 and §91.403 of the Federal Aviation Regulations unless an alternate program has been FAA approved.

There are no airworthiness limitations associated with this type design change.

3. INSPECTION REQUIREMENTS AND OVERHAUL (ATA CHAPTER 5)

| Requirement | Inspection | |
|--|--------------------|--|
| | Special Inspection | Inspection Term |
| 1. Inspect Stratus ES/ESG for damage. | NOTE: 1, 2, 3 | 12 months |
| 2. Inspect Stratus ES/ESG wiring and connectors for security. | NOTE: 1, 2, 3 | 12 months |
| 3. Inspect Stratus ES/ESG connector contacts and attachment hardware for corrosion. | NOTE: 2 | 12 months |
| 4. Clean Stratus ES/ESG. | | As necessary |
| 5. In accordance with 14 CFR 91.411 and 91.413, inspect and test Stratus ES/ESG for the interface with each static pressure system, altimeter instrument, automatic pressure altitude reporting system, or any other integrated system using the tests and specifications in 14 CFR Part 43, Appendix E and F. | | 24 months or After any maintenance performed on integrated systems including maintenance performed on Stratus ES/ESG where data correspondence error could be introduced |

Table 12: Scheduled maintenance

NOTES:

1. This item requires inspection following a hard landing event.
2. This item requires inspection following a lightning strike event.
3. This item requires inspection following a propeller strike event.

3.1. GENERAL INSPECTION INFORMATION

Removal and installation instructions are found in this document. Manufacturer's installation manuals and basic aircraft maintenance manuals should be used for additional reference material. Component maintenance must be completed by an authorized repair facility. Refer to Section 10: Servicing. If for any reason during inspection Stratus ES/ESG fails inspection or is otherwise not working properly, read the instructions contained in this manual before removing any Stratus ES/ESG components. If difficulty is encountered, seek assistance by contacting the manufacturer.

4. DIMENSIONS AND ACCESS (ATA CHAPTER 6)

4.1. COMPONENT LOCATIONS

Stratus ES/ESG: Stratus ES/ESG is panel mounted.

GPS position source (Stratus ES): Compatible GPS position sources are panel mounted.

GPS antenna (Stratus ESG): Typical GPS antenna installation locations are on the top of the aircraft or on the empennage with consideration for line of sight with satellites.

Transponder antenna: The transponder antenna should be mounted vertically on the bottom of the aircraft.

Altitude encoder: The altitude encoder should be installed using the manufacturer's instructions and recommendations.

4.2. MAINTENANCE INSTRUCTIONS

The following instructions are in addition to the standard practices used to maintain the aircraft structure, the wiring described in the aircraft manufacturer's maintenance manual, and FAA Advisory Circular 43.13-1B.

4.2.1. Stratus ES/ESG System Removal

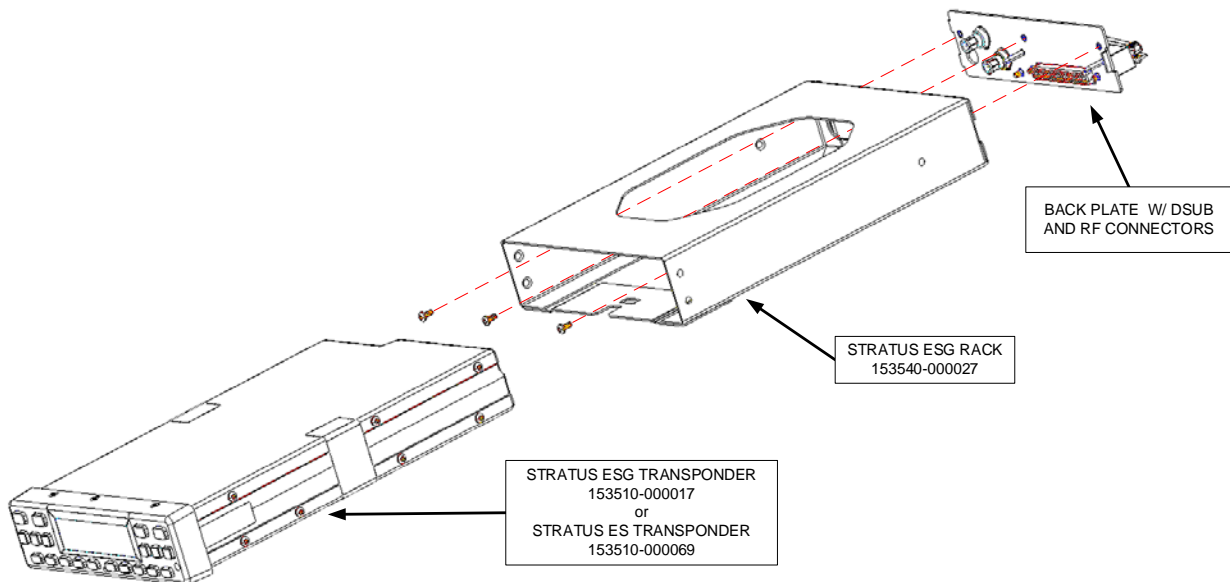


Figure 1: Stratus ES/ESG installation diagram

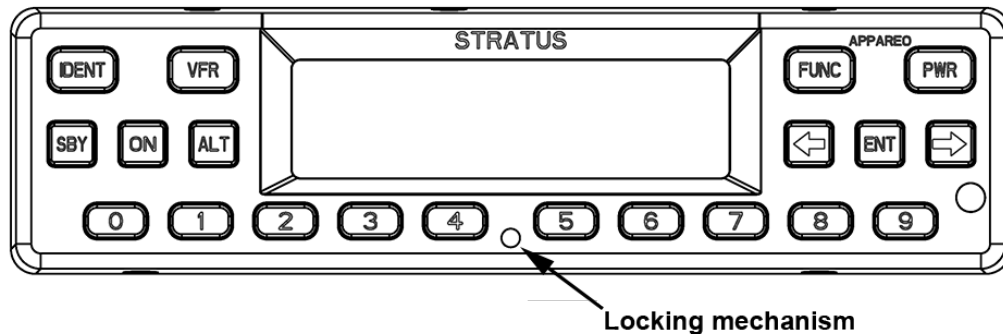


Figure 2: Locking mechanism location

To remove the Stratus ES/ESG assembly:

Turn the 3/32 hex wrench counter-clockwise on the locking mechanism through the front of Stratus ES/ESG to loosen the lock until the transponder connectors disconnect. Keep loosening the unit until it stops sliding out of the install rack. Do not loosen any further. Pull out Stratus ES/ESG by hand.

4.2.2. Stratus ES/ESG System Replacement

To replace the Stratus ES/ESG assembly:

1. Adjust the locking mechanism on Stratus ES/ESG using a 3/32 hex wrench so that the front lobe is in a vertical position. Insert the unit by hand until it comes to a stop. This occurs when the front lobe contacts the clearance slot of the install rack.
2. Tighten the locking mechanism with the 3/32 hex wrench until it is tight and the connectors have mated. Do not overtighten. If the mechanism will not tighten, verify that Stratus ES/ESG is properly seated in the rack. The unit is fully seated when the unit does not move back when tightening the locking mechanism.

NOTE: Ensure that the transponder is seated as far back as possible against the backplate so that there is a secure connection between the transponder and the connectors.

NOTE: Conduct the applicable functional tests in Section 4.3 after replacing the Stratus ES/ESG assembly.


4.2.3. Software Update

The following equipment is required to perform a software update:

- Portable computer with Windows operating system
- Stratus ES/ESG Software Update Tool desktop software (See Step 4)
- Stratus ES/ESG software/embedded hardware update (See Step 4)
- 3 amp power supply
- D-sub wiring harness
- Serial to USB adapter (optional)

To perform a software/embedded hardware update, complete the following steps:

1. Use the following diagram to wire the transponder for a software update.

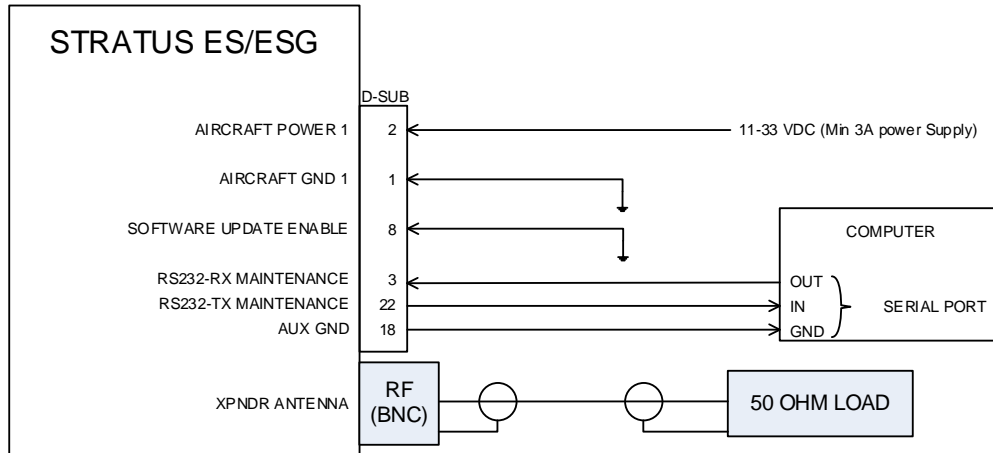

NOTES:

SOME DETAIL IS REMOVED FOR CLARITY

1 UNLESS OTHERWISE SPECIFIED, ALL WIRING TO BE DONE WITH 22 AWG WIRING

Figure 3: Software update wiring diagram

2. Plug the serial port connector into the computer. A serial to USB adapter may be required. If the adapter requires you to install drivers, install them.
3. Power on Stratus ES/ESG. It will enter into software update mode.

NOTE: The screen will be black, but the keypad will illuminate.
4. Apply the software/embedded hardware update.
 - a. Download the Stratus ES/ESG Update Tool and update file.
 - i. **Dealers:** Log in to the Appareo Dealer Portal, then navigate to appareo.com/dealer-portal/service-bulletins.
 - Experimental pilots:** Navigate to www.appareo.com/resources and click "Service Bulletins."
 - ii. Download the Stratus ES/ESG Update Tool (if you have not already done so) and the update file for your transponder model. When prompted, install the software by following the on-screen prompts.
 - b. Open the Stratus ES/ESG Update Tool.
 - c. Click the box below "Update File" and navigate to the update file that was downloaded in Step 4.a.

- d. Use the “Port” drop-down menu to select the computer port that is connected to Stratus ES/ESG.
 - e. Click **Update**. A pop-up box will appear when the update begins and completes.
5. Verify that the software/embedded hardware update has applied correctly.
- a. Remove the grounding pin (pin 8).
 - b. Turn off Stratus ES/ESG and enter into configuration mode (while holding the **FUNC** key, press and release the **PWR** key).
 - c. Press **FUNC** or the arrow keys to advance to the software versions diagnostic screens and verify that the most recent programmed configuration appears. Refer to the service bulletin alerting you of the software update for the most recent programmed configuration.

4.2.4. Stratus ES/ESG Configuration

See Stratus ES/ESG Installation Instructions (600840-000031) for instructions for how to configure Stratus ES/ESG if a replacement has been installed or the unit is new to this aircraft.

4.3. FUNCTIONAL TESTS

When installed in accordance with these installation instructions, Stratus ES/ESG complies with 14 CFR Part 91.227.

Final installation checks for Stratus ES/ESG are the responsibility of the installer. The installer must ensure that Stratus ES/ESG is installed on an aircraft that coincides with the approval given within the testing performed for the TSOs held by this device (TSO-C112e, TSO-C145d (Stratus ESG only), and TSO-C166b). Refer to Appendix A of the Stratus ES/ESG Installation Instructions (600840-000031).

After installation is complete, verify operation as identified in 14 CFR Part 43, Appendix F. The IFR6000 with OPT3 (manufactured by Cobham AvComm – formerly Aeroflex Test Solutions) or equivalent test set can be used to determine compliance.

Additional testing requirements can be found in Chapter 4 of Advisory Circular (AC) 20-165B. Additional functional tests may be required.

When installed correctly, Stratus ES/ESG complies with 14 CFR Part 91.215 & 91.225. While in airspace specified in 14 CFR Part 91.215, Stratus ES/ESG must be maintained to 14 CFR Part 91.413.

In addition to maintaining compliance to the regulations above, perform the following operational tests after configuration. Depending on the maintenance performed, an EMI test might also be required. See Stratus ES/ESG Installation Instructions (600840-000031) for EMI test procedures.

NOTE: Tests should be executed in an area where the aircraft has an unimpeded view of the sky, such that a proper GPS fix can be established.

4.3.1. Power bus

Turn on the power to the aircraft. Verify that the unit powers on.

4.3.2. Discrete inputs

NOTE: Depending on the installation, the functional tests for the following discrete inputs are optional.

1. Turn off Stratus ES/ESG and enter into configuration mode on Stratus ES/ESG (while holding the **FUNC** key, press and release the **PWR** key).
2. Press **FUNC** or the arrow keys to advance to the external input diagnostics screen. The screen displays the real-time state of the external standby, external IDENT, and squat switch inputs.
3. Activate and deactivate each discrete input and verify that the proper state is reflected on the display.
 - External standby: Ground each transponder's external standby pin and verify that the state is "inactive."
 - External IDENT: Activate the external switch and verify that the state is "active."
 - Squat switch: Activate the squat switch and verify that the correct state is shown.

4.3.3. Analog inputs

1. Enter into configuration mode on Stratus ES/ESG.
2. Press **FUNC** or the arrow keys to advance to the analog input diagnostics screen. The screen displays the real-time values read from the lighting bus and ambient light sensor.
3. Block the ambient lighting sensor input. Verify that the signal percentage drops.

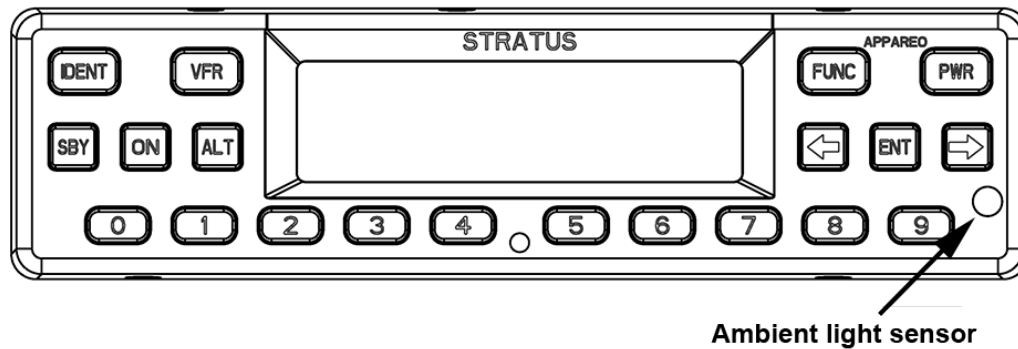


Figure 4: Interface for Stratus ES/ESG functional tests

4. Shine a light on the ambient light sensor. Verify that the signal percentage increases.
5. If you are using the 14V or 28V lighting bus: Adjust the lighting bus input to minimum. Verify that the displayed value is 0%.
6. If you are using the 14V or 28V lighting bus: Adjust the lighting bus input to maximum. Verify that the displayed value is 100%.

4.3.4. GPS position source (Stratus ES)

1. Enter into configuration mode on Stratus ES.
2. Press **FUNC** or the arrow keys to advance to the GPS receiver diagnostic screen.
3. Verify that the NIC value, latitude, and longitude are all non-zero numbers.

4.3.5. GPS antenna (Stratus ESG)

1. Turn off all avionics except Stratus ESG.
2. Enter into configuration mode on Stratus ESG.
3. Press **FUNC** or the arrow keys to advance to the GPS receiver diagnostic screen and wait until the NIC value is a non-zero number.
4. Turn on one avionic at a time. Verify that the NIC value does not drop below 7.

4.3.6. Altitude encoder

1. Enter into configuration mode on Stratus ES/ESG.
2. Press **FUNC** or the arrow keys to advance to the altitude diagnostic screen.
3. Verify that the altitude displayed is correct to your geographic location.

5. LIFTING AND SHORING (ATA CHAPTER 7)

5.1. LIFTING INFORMATION

5.1.1. Jacking Information

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

5.1.2. Lifting Information

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

5.2. SHORING INFORMATION

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

6. LEVELING AND WEIGHING (ATA CHAPTER 8)

6.1. LEVELING INFORMATION

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

6.2. WEIGHING INFORMATION

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

7. TOWING AND TAXIING (ATA CHAPTER 9)

7.1. TOW INSTRUCTIONS

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

7.2. TAXIING INSTRUCTIONS

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

8. PARKING, MOORING AND STORAGE (ATA CHAPTER 10)

8.1. MOORING INFORMATION

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

8.2. PARKING INFORMATION

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

8.3. STORAGE LIMITATIONS

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

9. PLACARDS AND MARKINGS (ATA CHAPTER 11)

Ensure that the labeling is in accordance with AC 43.13-2B, Chapter 2, Section 207, Sub-Section f., Paragraph (4).

10. SERVICING (ATA CHAPTER 12)

10.1. SERVICING INFORMATION

The Stratus ES/ESG system has a number of internal self-test features. See Section 10.1.2 for a troubleshooting guide.

10.1.1. Component Repair

Equipment determined in need of repair must be returned to a properly rated repair facility that is trained and qualified.

Appareo provides repair services and has an authorized repair station.

To utilize Appareo's repair services, contact Appareo support for a Return Merchandise Authorization (RMA) number. Return all defective and suspected defective components to the following address for repair and replacement.

**Appareo Systems, LLC
Attn: [RMA Number]
1830 NDSU Research Circle North
Fargo, ND 58102**

For additional information, contact Appareo Systems at +1-701-356-2200.

10.1.2. Troubleshooting

Use the table below to troubleshoot possible problems with Stratus ES/ESG.

| Problem | Troubleshooting Steps |
|--|---|
| GPS information is not being received | <p>Stratus ES:</p> <ol style="list-style-type: none"> 1. Enter into configuration mode on Stratus ES. 2. Go to the BIT diagnostic screen. <p>If the GPS Failure BIT failed (a “1” appears): There is a problem with the connection to the GPS position source. Verify that the connection between Stratus ES and the GPS position source is secure.</p> <p>If the GPS Failure BIT did not fail (a “0” appears): The GPS position source is not achieving GPS lock, but the connection is good and the position source is configured correctly. Refer to the documentation for your GPS position source for troubleshooting.</p> <p>NOTE: A BIT failure will not appear until at least 5 minutes after Stratus ES is powered on.</p> <hr/> <p>Stratus ESG:</p> <ol style="list-style-type: none"> 1. Verify that the aircraft has a clear view of the sky. 2. Verify that the antenna connections and cables are not loose. 3. Verify that the coax cable is connected to the correct port. <p>NOTE: Initial GPS fix could take up to 20 minutes.</p> |
| GPS antenna signal quality is reduced (Stratus ESG only) | <ol style="list-style-type: none"> 1. Turn off all avionics except the GPS/transponder. 2. Enter into configuration mode on Stratus ESG. 3. Go to the CN0 diagnostic screen and wait for the CN0 values to populate. 4. Turn on one avionic at a time. If the CN0 values drop by 2 dB or more, there might be an interference problem. The avionic causing the interference might need to be relocated in the cockpit, antennas might need to be moved farther apart, or filters might need to be added to the avionic. |

| | |
|--|--|
| <p>Transponder is not receiving the squat switch position</p> | <ol style="list-style-type: none"> 1. Check the connections and the pin-out of the transponder to verify that the squat switch port is correctly connected. 2. Verify that the squat switch works independent of the transponder. |
| <p>The power key does not power on Stratus ES/ESG</p> | <ol style="list-style-type: none"> 1. Verify that the power key is not stuck. 2. Verify that the circuit breaker has not tripped. <p>If it has tripped: Reset the circuit breaker switch and try the power key again.</p> <p>NOTE: If the circuit breaker opens it may be reset only once.</p> <p>If it did not trip: Verify that the electrical connection to the transponder is secure. Verify that the voltage at the input to the unit is between 11 VDC and 36 VDC.</p> |
| <p>The altitude displayed is incorrect</p> | <ol style="list-style-type: none"> 1. Enter into configuration mode on Stratus ES/ESG and verify that the altitude source is set as the currently used altitude source. If the altitude source is a serial connection, verify that the correct encoding option was selected. 2. Verify that the correct connections are made to the transponder. 3. Use an altitude simulator to verify the cabling. 4. Verify that there is not a problem with the altitude source. |
| <p>The screen displays a “transmitter failure” error message</p> | <p>This message appears when one of the following issues occurs: improper impedance between antenna and transponder, improper connection on connectors, improper seating of transponder into tray.</p> <ol style="list-style-type: none"> 1. Verify that the transponder is completely seated in the rack. Ensure back plate has been properly installed to rack. 2. Verify that the transponder antenna is connected to the port labeled XPNDR ANT and that the GPS antenna is connected to the port labeled GPS (Stratus ESG only). 3. Check all connectors to ensure they are properly mated. Check these connectors for opens or shorts. 4. Verify that the maximum loss from the transponder connector to the antenna connector is 2 db. 5. Inspect the transponder antenna to ensure functionality and adherence to requirements identified in the transponder antenna section. 6. Inspect wiring to ensure cabling integrity. |


| | |
|---|---|
| <p>The screen displays a Built in Test (BIT) failure</p> <p>The display screen will display a warning message and degraded state indicator  in the event that any of Stratus ES/ESG's BITs fail.</p> | <p>The Stratus ES/ESG screen might display a warning message with the instructions below. Below is guidance regarding how to assess the failure:</p> <ul style="list-style-type: none"> • PRESS FUNC TO CLEAR: A non-critical error has been detected. The transponder will run in a degraded state until the error is resolved. Contact Appareo for further assistance. • PLEASE RESTART UNIT: A critical error has been detected. Restarting the unit may fix the error. If the message returns after restarting, contact Appareo for further assistance. • PLEASE SHUTDOWN UNIT: A critical error has been detected. Power off the unit and do not turn it back on. Contact Appareo for further assistance. • OVERHEATED: The transponder has overheated. Transponder function will resume when the transponder cools down. • WAITING TO BE UNSTUCK: A key has been depressed for more than 20 seconds. If a key is stuck, try to unstick the key. • WAITING FOR RELEASE: The external suppression input is constantly in a suppressed state. Contact Appareo for further assistance. • ATTEMPTING TO RECOVER: A squitter rate error has been detected. The transponder may recover itself, but if it does not, restart the unit. If the warning message persists, contact Appareo for further assistance. |
|---|---|

Table 13: Troubleshooting guide

10.2. LUBRICATION INFORMATION

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

10.3. EQUIPMENT REQUIRED FOR SERVICING

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)


10.4. CONSUMABLE MATERIALS

No change to basic aircraft Instructions for Continued Airworthiness (Maintenance Manuals)

11. WIRING DIAGRAMS

| Stratus ES D-SUB PINOUT DESCRIPTIONS | | | | | |
|--------------------------------------|---------------------------|-----|-----|-----------------------|-----|
| PIN | DESCRIPTION | I/O | PIN | DESCRIPTION | I/O |
| 1 | AIRCRAFT GROUND | | 20 | AIRCRAFT GROUND | |
| 2 | AIRCRAFT POWER | | 21 | AIRCRAFT POWER | |
| 3 | RS232 EXTERNAL GPS | IN | 22 | RS232-TX MAINTENANCE | OUT |
| 4 | - | | 23 | RS232-TX AUX | OUT |
| 5 | RS232-RX ALTITUDE | IN | 24 | RS232-TX ALTITUDE | OUT |
| 6 | RS232-TX GPS 1PPS | OUT | 25 | EXTERNAL IDENT | IN |
| 7 | EXTERNAL STANDBY | IN | 26 | EXTERNAL SQUAT SWITCH | IN |
| 8 | SOFTWARE UPDATE ENABLE | IN | 27 | ALTITUDE D4 | IN |
| 9 | ALTITUDE A1 | IN | 28 | ALTITUDE A2 | IN |
| 10 | ALTITUDE A4 | IN | 29 | ALTITUDE B1 | IN |
| 11 | ALTITUDE B2 | IN | 30 | ALTITUDE B4 | IN |
| 12 | ALTITUDE C1 | IN | 31 | ALTITUDE C2 | IN |
| 13 | ALTITUDE C4 | IN | 32 | EXTERNAL SUPPRESS I/O | I/O |
| 14 | EXTERNAL SUPPRESS IN | IN | 33 | 14V LIGHTING BUS HI | IN |
| 15 | 28V LIGHTING BUS HI | IN | 34 | - | |
| 16 | - | | 35 | - | |
| 17 | AUX +5V POWER | OUT | 36 | AUX +5V POWER | OUT |
| 18 | EXTERNAL GPS COMMON (GND) | | 37 | ALTITUDE COMMON (GND) | |
| 19 | AUX +5V POWER | OUT | | | |


| Stratus ESG D-SUB PINOUT DESCRIPTIONS | | | | | |
|---------------------------------------|------------------------|-----|-----|-----------------------|-----|
| PIN | DESCRIPTION | I/O | PIN | DESCRIPTION | I/O |
| 1 | AIRCRAFT GROUND | | 20 | AIRCRAFT GROUND | |
| 2 | AIRCRAFT POWER | | 21 | AIRCRAFT POWER | |
| 3 | RS232-RX MAINTENANCE | IN | 22 | RS232-TX MAINTENANCE | OUT |
| 4 | - | | 23 | RS232-TX AUX | OUT |
| 5 | RS232-RX ALTITUDE | IN | 24 | RS232-TX ALTITUDE | OUT |
| 6 | RS232-TX GPS 1PPS | OUT | 25 | EXTERNAL IDENT | IN |
| 7 | EXTERNAL STANDBY | IN | 26 | EXTERNAL SQUAT SWITCH | IN |
| 8 | SOFTWARE UPDATE ENABLE | IN | 27 | ALTITUDE D4 | IN |
| 9 | ALTITUDE A1 | IN | 28 | ALTITUDE A2 | IN |
| 10 | ALTITUDE A4 | IN | 29 | ALTITUDE B1 | IN |
| 11 | ALTITUDE B2 | IN | 30 | ALTITUDE B4 | IN |
| 12 | ALTITUDE C1 | IN | 31 | ALTITUDE C2 | IN |
| 13 | ALTITUDE C4 | IN | 32 | EXTERNAL SUPPRESS I/O | I/O |
| 14 | EXTERNAL SUPPRESS IN | IN | 33 | 14V LIGHTING BUS HI | IN |
| 15 | 28V LIGHTING BUS HI | IN | 34 | - | |
| 16 | - | | 35 | - | |
| 17 | AUX +5V POWER | OUT | 36 | AUX +5V POWER | OUT |
| 18 | AUX GROUND | | 37 | ALTITUDE COMMON (GND) | |
| 19 | AUX +5V POWER | OUT | | | |

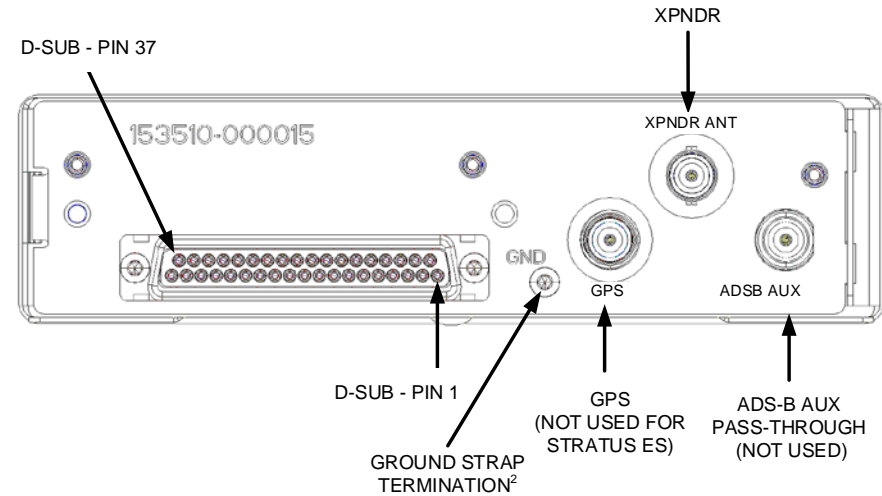

NOTES:
 SOME DETAIL IS REMOVED FOR CLARITY
 1 MAX CURRENT DRAW COMBINED FOR AUX +5V POWER IS 1.25 AMP. THIS WILL RESULT IN AN INCREASE OF 0.25 AMP @ 28VDC AND 0.47 AMP @ 14VDC
 2 BOND IMPEDENCE BETWEEN AIRCRAFT GROUND AND UNIT CHASSIS MUST BE LESS THAN 2.5 MILLIOHMS. PROVIDED FOR TERMINATION IS A #4-40 THREADED GROUNDING POINT.

Figure 5: Pin-out

Typical Stratus ES Interconnect (Parallel Altitude Encoder)

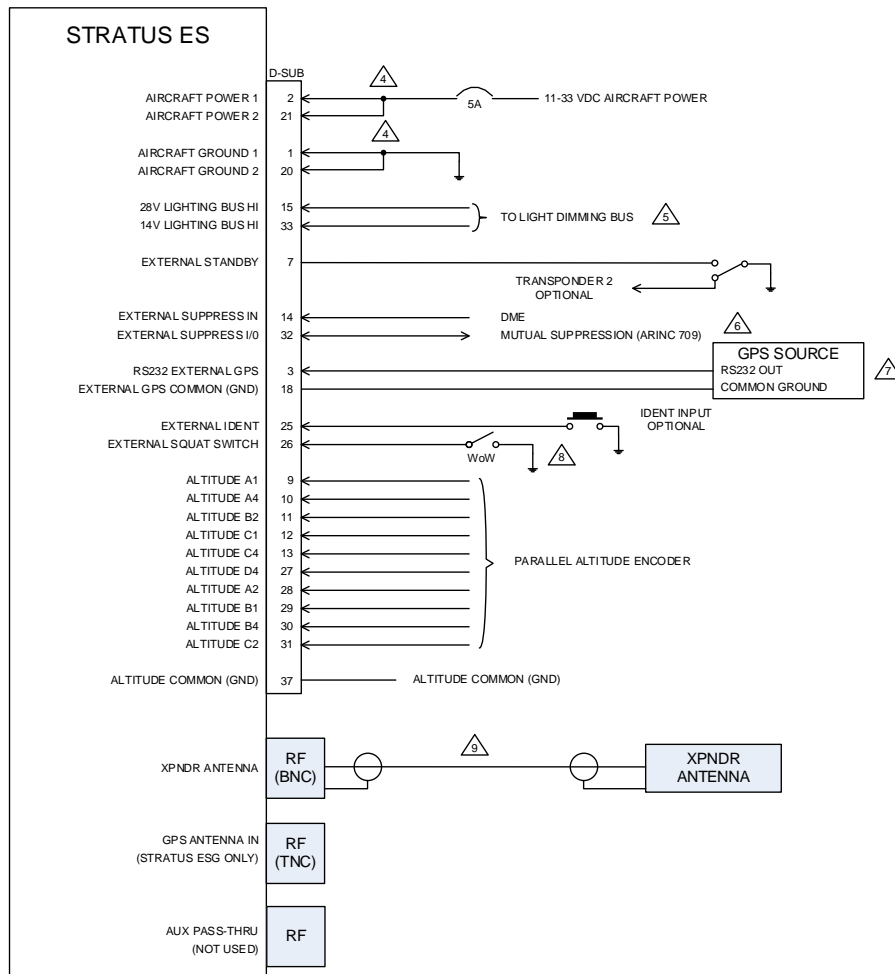


NOTES:

- SOME DETAIL IS REMOVED FOR CLARITY
- 1 UNLESS OTHERWISE SPECIFIED, ALL WIRING TO BE DONE WITH 22 AWG WIRING
- 2 DRAWING DEPICTS INSTALLATION WITH A PARALLEL ALTITUDE ENCODER. SEE PAGE 26 FOR SERIAL ENCODER WIRING
- 3 PIN 24 (RS232 TX ALTITUDE) CAN BE USED AS A SERIAL ALTITUDE SOURCE FOR OTHER EQUIPMENT
- 4 FROM SPLICE TO UNIT, WIRE LENGTH SHOULD NOT EXCEED 6 INCHES
- 5 CONNECT ONLY 1 INPUT TO LIGHTING BUS
- TO CONTROL BRIGHTNESS WITH THE AMBIENT LIGHT SENSOR, DO NOT CONNECT THESE PINS AND SELECT THE AMBIENT LIGHT SENSOR DURING BACKLIGHT SOURCE CONFIGURATION
- 6 ONLY ONE SUPPRESSION SOURCE MAY BE CONNECTED AT ONE TIME (OPTIONAL)
- 7 APPROVED EXTERNAL GPS SOURCES ARE: GARMIN 430W/530W, GARMIN 650/750, & AVIDYNE 1FD440/1FD540. SEE INSTALLATION INSTRUCTIONS SECTION 1.11.1 FOR ADDITIONAL DETAILS
- 8 OPTIONAL INSTALLATION. TYPICALLY CONNECTED TO WEIGHT ON WHEELS SWITCH. REFER TO AIRCRAFT MANUAL TO DETERMINE APPLICABILITY.
- 9 USING RG400, THE MAXIMUM CABLE LENGTH IS 14 FEET WITH A MAXIMUM OF 2 dB LOSS. IF THE INSTALLATION REQUIRES MORE LENGTH, SELECT OTHER 50 OHM COAX THAT WILL PROVIDE A MAXIMUM 2 dB LOSS.

Figure 6: Stratus ES wiring diagram with parallel altitude encoder

Typical Stratus ES Interconnect (Serial Altitude Encoder)

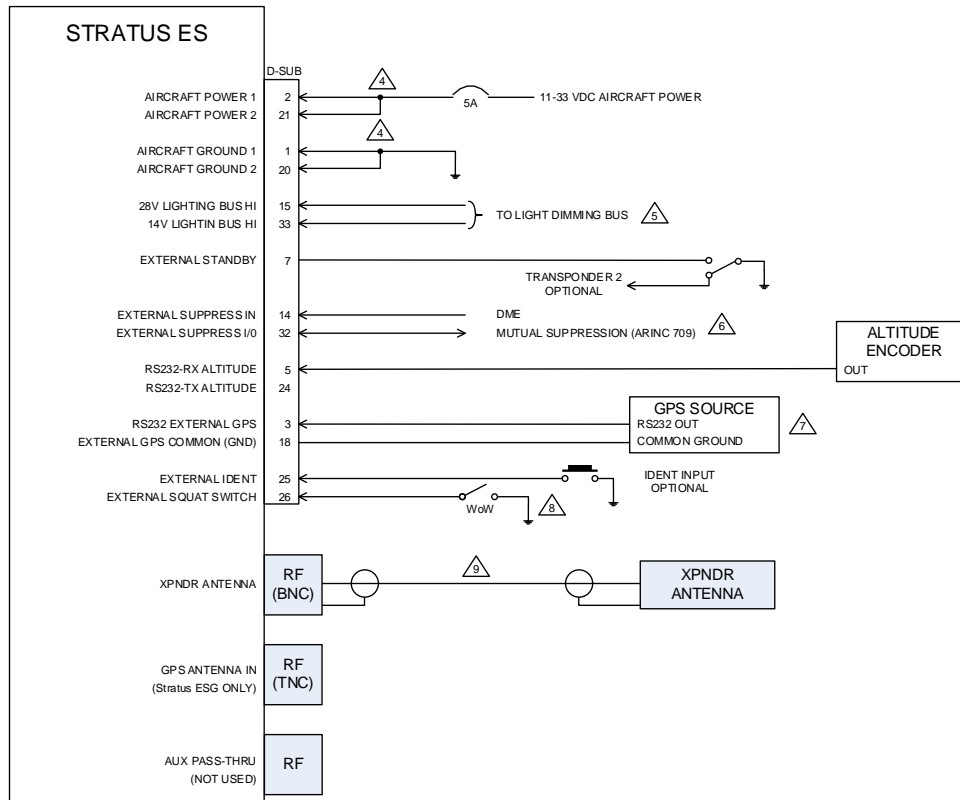


NOTES:

- SOME DETAIL IS REMOVED FOR CLARITY
- UNLESS OTHERWISE SPECIFIED, ALL WIRING TO BE DONE WITH 22 AWG WIRING
 - DRAWING DEPICTS INSTALLATION WITH A SERIAL ENCODER. SEE PAGE 25 FOR PARALLEL ENCODER WIRING
 - PIN 24 (RS232 TX ALTITUDE) CAN BE USED AS A SERIAL ALTITUDE SOURCE FOR OTHER EQUIPMENT
 - FROM SPLICE TO UNIT, WIRE LENGTH SHOULD NOT EXCEED 6 INCHES
 - CONNECT ONLY 1 INPUT TO LIGHTING BUS
 - TO CONTROL BRIGHTNESS WITH THE AMBIENT LIGHT SENSOR, DO NOT CONNECT THESE PINS AND SELECT THE AMBIENT LIGHT SENSOR DURING BACKLIGHT SOURCE CONFIGURATION
 - ONLY ONE SUPPRESSION SOURCE MAY BE CONNECTED AT ONE TIME (OPTIONAL)
 - APPROVED EXTERNAL GPS SOURCES ARE: GARMIN 430W/530W, GARMIN 650/750, & AVIADYNE IFD440/IFD540. SEE INSTALLATION INSTRUCTIONS SECTION 1.11.1 FOR ADDITIONAL DETAILS
 - OPTIONAL INSTALLATION. TYPICALLY CONNECTED TO WEIGHT ON WHEELS SWITCH. REFER TO AIRCRAFT MANUAL TO DETERMINE APPLICABILITY.
 - USING RG400, THE MAXIMUM CABLE LENGTH IS 14 FEET WITH A MAXIMUM OF 2 dB LOSS. IF THE INSTALLATION REQUIRES MORE LENGTH, SELECT OTHER 50 OHM COAX THAT WILL PROVIDE A MAXIMUM 2 dB LOSS.

Figure 7: Stratus ES wiring diagram with serial altitude encoder

Stratus ESG Interconnect (Parallel Altitude Encoder)

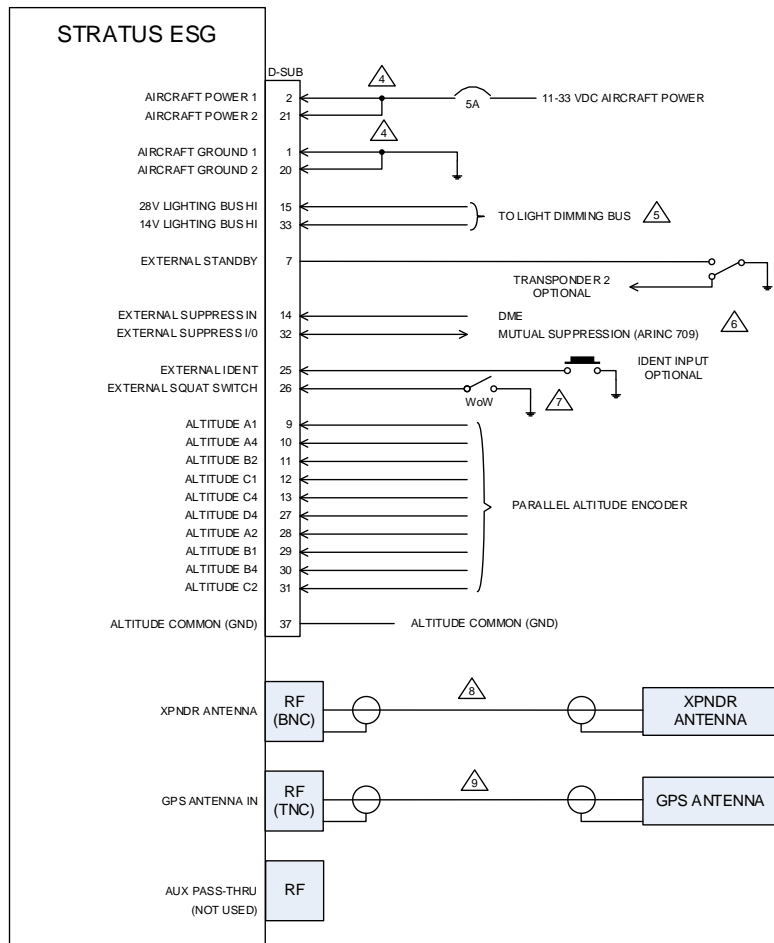


NOTES:

- SOME DETAIL IS REMOVED FOR CLARITY
- 1 UNLESS OTHERWISE SPECIFIED, ALL WIRING TO BE DONE WITH 22 AWG WIRING
- 2 DRAWING DEPICTS INSTALLATION WITH A PARALLEL ALTITUDE ENCODER. SEE PAGE 28 FOR SERIAL ENCODER WIRING
- 3 PIN 24 (RS232 TX ALTITUDE) CAN BE USED AS A SERIAL ALTITUDE SOURCE FOR OTHER EQUIPMENT
- 4 FROM SPLICE TO UNIT, WIRE LENGTH SHOULD NOT EXCEED 6 INCHES
- 5 CONNECT ONLY 1 INPUT TO LIGHTING BUS
- TO CONTROL BRIGHTNESS WITH THE AMBIENT LIGHT SENSOR, DO NOT CONNECT THESE PINS AND SELECT THE AMBIENT LIGHT SENSOR DURING BACKLIGHT SOURCE CONFIGURATION
- 6 ONLY ONE SUPPRESSION SOURCE MAY BE CONNECTED AT ONE TIME (OPTIONAL)
- 7 OPTIONAL INSTALLATION. TYPICALLY CONNECTED TO WEIGHT ON WHEELS SWITCH. REFER TO AIRCRAFT MANUAL TO DETERMINE APPLICABILITY.
- 8 USING RG400, THE MAXIMUM CABLE LENGTH IS 14 FEET WITH A MAXIMUM OF 2 dB LOSS. IF THE INSTALLATION REQUIRES MORE LENGTH, SELECT OTHER 50 OHM COAX THAT WILL PROVIDE A MAXIMUM 2 dB LOSS.
- 9 ALL WIRING SHOULD HAVE A MINIMUM OF 2 dB LOSS AND A MAXIMUM OF 7 dB LOSS. EACH BNC OR TNC CONNECTION IS ESTIMATED TO HAVE A 0.2 dB LOSS

Figure 8: Stratus ESG wiring diagram with parallel altitude encoder

Stratus ESG Interconnect (Serial Altitude Encoder)

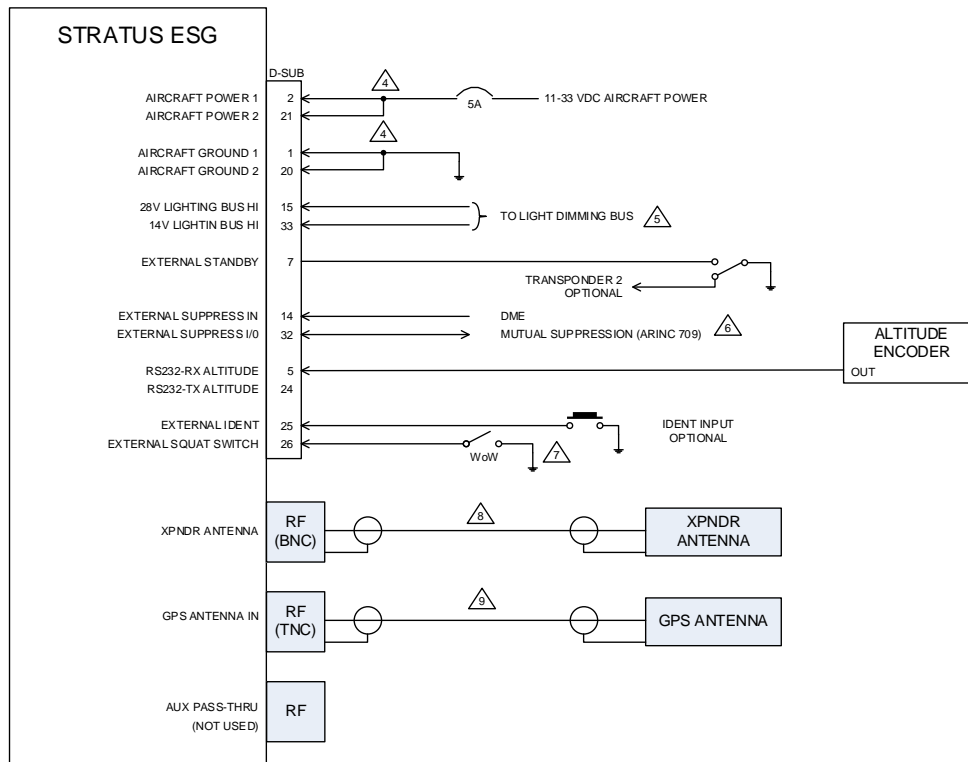

NOTES:

- SOME DETAIL IS REMOVED FOR CLARITY
- 1 UNLESS OTHERWISE SPECIFIED, ALL WIRING TO BE DONE WITH 22 AWG WIRING
- 2 DRAWING DEPICTS INSTALLATION WITH A SERIAL ENCODER. SEE PAGE 27 FOR PARALLEL ENCODER WIRING
- 3 PIN 24 (RS232 TX ALTITUDE) CAN BE USED AS A SERIAL ALTITUDE SOURCE FOR OTHER EQUIPMENT
- 4 FROM SPLICE TO UNIT, WIRE LENGTH SHOULD NOT EXCEED 6 INCHES
- 5 CONNECT ONLY 1 INPUT TO LIGHTING BUS
- TO CONTROL BRIGHTNESS WITH THE AMBIENT LIGHT SENSOR, DO NOT CONNECT THESE PINS AND SELECT THE AMBIENT LIGHT SENSOR DURING BACKLIGHT SOURCE CONFIGURATION
- 6 ONLY ONE SUPPRESSION SOURCE MAY BE CONNECTED AT ONE TIME (OPTIONAL)
- 7 OPTIONAL INSTALLATION. TYPICALLY CONNECTED TO WEIGHT ON WHEELS SWITCH. REFER TO AIRCRAFT MANUAL TO DETERMINE APPLICABILITY.
- 8 USING RG400, THE MAXIMUM CABLE LENGTH IS 14 FEET WITH A MAXIMUM OF 2 dB LOSS. IF THE INSTALLATION REQUIRES MORE LENGTH, SELECT OTHER 50 OHM COAX THAT WILL PROVIDE A MAXIMUM 2 dB LOSS.
- 9 ALL WIRING SHOULD HAVE A MINIMUM OF 2 dB LOSS AND A MAXIMUM OF 7 dB LOSS. EACH BNC OR TNC CONNECTION IS ESTIMATED TO HAVE A 0.2 dB LOSS

Figure 9: Stratus ESG wiring diagram with serial altitude encoder